



<b>and Wi-Fi traffic and sessions log</b>												
<b>Sent and received SMS, MMS, E-mail messages log</b>	Sent SMS	-	Yes	Yes	Yes <sup>(2)</sup>	-	-	-	-	-	-	-
<b>Deleted messages information</b>	-	-	Yes <sup>(1)</sup>	-	Yes <sup>(1)</sup>	-	-	-	-	Yes <sup>(8)</sup>	-	-
<b>Flash SMS information</b>	-	-	Yes	-	Yes	-	-	-	-	-	-	-
<b>SMS, MMS and E-mail messages in standard folders</b>	Yes	Yes <sup>(6)</sup>	Yes	Yes	Yes	Yes	Yes <sup>(6)</sup>	Yes <sup>(6)</sup>	Yes <sup>(6)</sup>	Yes <sup>(9)</sup>	Yes <sup>(6)</sup>	Yes <sup>(6)</sup>
<b>SMS, MMS and E-mail messages in custom folders</b>	Yes	NA	Yes	Yes	Yes	Yes <sup>(3)</sup>	-	-	NA	Yes <sup>(9)</sup>	-	-
<b>File system in phone memory and flash card</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes/-	Yes	Yes/NA	Yes	Yes
<b>Photos, videos and voice records</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Geo event positioning</b>	Yes <sup>(7)</sup>	Yes <sup>(7)</sup>	Yes	Yes <sup>(7)</sup>	Yes <sup>(7)</sup>	Yes <sup>(7)</sup>	Yes <sup>(7)</sup>	Yes <sup>(7)</sup>	Yes <sup>(7)</sup>	Yes <sup>(7)</sup>	-	-
<b>Web Browsers</b>	Yes <sup>(4)</sup>	-	Yes	-	-	Yes	-	-	-	Yes	Yes	-
<b>Timeline</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Communication Statistics</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Passwords</b>	-	-	-	-	-	-	-	-	-	Yes	-	-
<b>Web Connections and Location</b>	-	-	-	-	-	-	-	-	-	Yes	Yes <sup>(10)</sup>	-

<b>Services</b>													
<b>Applications</b>	-	-	-	-	-	-	-	-	-	-	Yes	Yes	-
<b>Google Services</b> Google Mail, Google Maps, Google Calendar, Google+, Google Talk	-	-	-	-	-	-	-	-	-	-	Yes	Yes	-
<b>Yahoo! Services</b> Yahoo! Messenger, Yahoo! Mail	-	-	-	-	-	-	-	-	-	-	Yes	Yes	-
<b>Social Networks</b> Facebook, Twitter, Twinkle, Foursquare	-	-	-	-	-	-	-	-	-	-	Yes	Yes	-
<b>Messengers</b> Skype, Facebook Messenger, Touch, Kik Messenger, HeyTell, Textie, WhatsApp	-	-	-	-	-	-	-	-	-	-	Yes	Yes	-
<b>Productivity</b> Dropbox, Evernote, Remember The Milk	-	-	-	-	-	-	-	-	-	-	Yes	Yes	-
<b>Spyware</b>	-	-	-	-	-	-	-	-	-	-	-	Yes	-
<b>Dictionaries</b>	-	-	-	-	-	-	-	Yes	-	-	Yes	Yes	-
<b>Device Logs</b>	-	-	-	-	-	-	-	Yes	-	-	-	Yes	-
<b>Apple Plist Viewer</b>	-	-	-	-	-	-	-	-	-	-	Yes	-	-
<b>SQLite database Viewer</b>	-	-	Yes	-	-	-	-	-	-	-	Yes	Yes	-
<b>Nokia PM Viewer</b>	Yes	-	Yes	-	-	-	-	-	-	-	-	-	-
<b>BlackBerry IPD Viewer</b>	-	-	-	-	-	-	-	Yes	-	-	-	-	-
<b>Unicode support</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	-	Yes	Yes	Yes	Yes	Yes

<b>Advanced search through phone database</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
---	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

- <sup>(1)</sup> - Reading only SMS messages information is available in Event Log section. Message must not be older than the number of days specified by "Log duration" parameter in system log application.
- <sup>(2)</sup> - Only SMS information.
- <sup>(3)</sup> - Only first-level custom folders.
- <sup>(4)</sup> - Only for Nokia Series 40 phones.
- <sup>(5)</sup> - Only for Nokia Series 60 2<sup>nd</sup> Edition and 3<sup>rd</sup> Edition Initial Release smartphones
- <sup>(6)</sup> - Only SMS
- <sup>(7)</sup> - For the photos that have GPS or Cell coordinates
- <sup>(8)</sup> - Only timestamp and sender information
- <sup>(9)</sup> - E-mails only from jail-broken Apple devices
- <sup>(10)</sup> - Only Locations

"Yes" means the feature is supported by the software.

"-" means the feature is not supported by the software.

"NA" means the feature is not available in the device.

### 1 - Nokia and Vertu classic phones:

- Nokia: 1200, 1202, 2112, 2115, 2115i, 2127, 2270, 2275, 2280, 2285, 3210, 3310, 3315, 3320, 3321, 3330, 3350, 3360, 3361, 3390, 3395, 3410, 3510, 3570, 3580, 3585, 3590, 3610, 5110, 5130, 5190, 5210, 5510, 6110, 6150, 6190, 6210, 6250, 6310, 6310i, 6320, 6340, 6340i, 6360, 6370, 6385, 6510, 6590, 7110, 7160, 7190, 8210, 8250, 8310, 8390, 8810, 8850, 8855, 8890, 8910, 1506, 1680 Classic, 2125, 2220 Slide, 2320 Classic, 2323 Classic, 2330 Classic, 2600 Classic, 2605, 2608, 2610, 2626, 2630, 2650, 2660, 2680 Slide, 2690, 2700 Classic, 2710 Navigation Edition, 2720 Fold, 2730 Classic, 2760, 2855, 2865, 3100, 3105, 3108, 3109 Classic, 3110 Classic, 3120 Classic, 3125, 3128, 3152, 3155, 3155i, 3200, 3205, 3208 Classic, 3220, 3300, 3500 Classic, 3510i, 3520, 3555, 3560, 3586, 3586i, 3587, 3587i, 3588i, 3589i, 3595, 3600 Slide, 3606, 3608, 3610 Fold, 3710 Fold, 3720 Classic, 3806, 5000, 5070, 5100, 5130 XpressMusic, 5140, 5140i, 5200, 5220 XpressMusic, 5300, 5310 XpressMusic, 5330 Mobile TV Edition, 5330 XpressMusic, 5610 XpressMusic, 6010, 6011, 6011i, 6012, 6015, 6020, 6021, 6030, 6060, 6061, 6062, 6066, 6070, 6080, 6085, 6086, 6088, 6100, 6101, 6102, 6102i, 6103, 6108, 6111, 6112, 6125, 6126, 6131, 6133, 6136, 6151, 6152, 6155, 6165, 6170, 6175i, 6178i, 6200, 6208 Classic, 6212 Classic, 6215i, 6216 Classic, 6220, 6225, 6230, 6230i, 6233, 6234, 6235, 6245i, 6255, 6260 Slide, 6263, 6265, 6267, 6270, 6275, 6280, 6282, 6288, 6300, 6300i, 6301, 6303 Classic, 6303i Classic, 6315i, 6316s, 6350, 6500 Classic, 6500 Slide, 6555, 6560, 6585, 6600 Fold, 6600 Slide, 6600i Slide, 6610, 6650, 6651, 6700 Classic, 6750 Mural, 6800, 6810, 6820, 6820, 6822, 7020, 7070 Prism, 7088, 7100 Supernova, 7200, 7210 Supernova, 7210, 7230, 7230, 7250, 7250i, 7260, 7270, 7280, 7310 Supernova, 7360, 7370, 7373, 7380, 7390, 7500 Prism, 7510 Supernova, 7600, 7610 Supernova, 7900 Prism, 8208, 8600 Luna, 8800 Arte, 8800 Sirocco Edition, 8800, 8801, 8910i, Asha 200, Asha 201, Asha 300, Asha 303, C1-01, C1-02, C2-00, C2-01, C2-01.1, C2-02, C2-02.1, C2-05, C2-05.1, C3-00, C3-01, C3-01m, X2-00, X2-01, X2-02, X2-05, X3, X3-01, X3-02
- Vertu: Ascent 2004, Ascent M 2006, Ascent Ti, Constellation, Signature 2002, Signature 2006, Signature 2008

- Mobiado: Professional, Professional Executive

## 2 - Sony Ericsson classic phones:

550im, 658c, 901a, A86, A8i, C510, C510a, C702a, C702c, C702i, C901, C902, C902c, C903, C903a, C905, C905a, C905c, D750i, K758c, F100i Jalou by Dolce Gabbana, F100i Jalou, F500i, G502, G502c, G700, G700c, G700i Business Edition, G702, G705, G705a, G705u, G900, J10, J105a (Naite), J105i (Naite), J108a Cedar, J108i Cedar, J10i2 Elm, J20 Hazel, J20i Hazel, K500c, K500i, K506c, K508c, K508i, K510i, K510c, K530i, K550i, K550c, K600i, K608i, K610i, K618i, V630i, K630i, K660i, K700c, K700i, K750i, K750c, K770i, K790a, K790i, K790c, K800i, K810i, K818c, K850a, K850i, K858c, Live with Walkman, M1a Aspen, M1i Aspen, M600i, M608c, P1c, P1i, P800, P802, P900, P908, P910a, P910c, P910i, P990i, S302, S500i, S700c, S700i, S710a, Satio U1a, Satio U1i, SO-01B, SO-01C Sakura Pink, SO-01C, Sony Ericsson Windows Mobile, T226, T228, T230, T290c, T290i, T300, T302, T310i, T312, T610, T618, T630, T650i, T68, T68i, T68ie, T700, T707, T707a, T715, T715a, U100a Yari, U100i Yari, U10a Aino, U10i, U5a Vivaz, U5at Vivaz, U5i Vivaz, U8180, U8a Vivaz Pro, U8i Vivaz Pro, V600i, V640i, V800, V802SE, Z800i, VM701 Optimus Slider, W20 Zyllo, W200i, W200c, W20i Zyllo, W300i, W300c, W350, W350a, W380a, W380i, W395, W508, W518a, W550i, W550c, W580i, W580c, W595, W600a, W600c, W600i, W610i, W610c, W660i, W700i, W700c, W705, W710i, W710c, W715, W760c, W760i, W8 Walkman E16a, W800i, W800c, W810i, W810c, W830i, W830c, W850i, W880i, W888c, W890i, W900i, W902, W908c, W910i, W950i, W958c, W960i, W980, W995, W995a, WT18i, WT19a Walkman, Xperia Active, Xperia Arc HD, Xperia arc S, Xperia arc, Xperia mini pro, Xperia mini, Xperia Neo V MT11a, Xperia neo, Xperia play SO-01D, Xperia play, Xperia ray ST18a, XPERIA X1, Xperia X10 mini pro, Xperia X10 mini, Xperia X10a, Xperia X10i, XPERIA X1a, Xperia X2, Xperia X2a, Xperia X5 Pureness, Xperia X8, Z1010, Z310a, Z310i, Z500a, Z520a, Z520i, Z520c, Z525a, Z530i, Z530c, Z550i, Z550c, Z555a, Z555i, Z558i, Z558c, Z600, Z608, Z610i, Z710i, Z710c, Z750i, Z770i, Z780i

## 3 - Nokia S60/S80/S90 platform smartphones:

- Nokia: 3230, 3250, 3600, 3620, 3650, 3660, 5228, 5230, 5230, 5230, 5232, 5233, 5250, 5320 XpressMusic, 5500 Sport, 5530 XpressMusic, 5630 XpressMusic, 5700 XpressMusic, 5730 XpressMusic, 5800 XpressMusic, 6110 Navigator, 6120 Classic, 6121 Classic, 6122 Classic, 6124 Classic, 6210 Navigator, 6220 Classic, 6260, 6290, 6600, 6620, 6630, 6631, 6638, 6650 (smartphone), 6670, 6680, 6681, 6682, 6700 Slide, 6710 Navigator, 6720 Classic, 6730 Classic, 6760 Slide, 6788, 6788i, 6790 Slide, 6790 Surge, 702T, 7610, 7650, 808 PureView, C5-00, C5-00.1, C5-00.2, C5-00.3, C5-01, C5-03, C5-04, C5-05, C5-06, C6-00, C6-01, C7 Astound, C7-00, E50, E5-00, E51, E52, E55, E55, E6-00, E6-00.1, E60, E61, E61i, E62, E63, E65, E66, E66, E70, E7-00, E71, E71x, E72, E73 Mode, E75, E90, N70, N71, N72, N73, N75, N76, N77, N78, N79, N80, N8-00, N81, N82, N85, N86, N90, N91, N92, N93, N93i, N95 8GB, N95, N96, N97 mini, N97, N-Gage QD, N-Gage, X5-00, X5-01, X5-01.2, X6, X7-00, X7-00.1, 9300, 9300i, 9500, 7700, 7710
- Samsung: GT-i7110, GT-I8150, INNOV8 (i8510), OMNIA HD, SGH-D700, SGH-D710, SGH-D720, SGH-D728, SGH-D730, SGH-G810, SGH-i400, SGH-i450, SGH-i520, SGH-i550, SGH-i560, SGH-i570, SGH-L870, SGH-Z600
- Panasonic: X700, X800
- Siemens: SX1

## 4 - UIQ2 platform smartphones:

- Sony Ericsson: P800, P802, P900, P908, P910i, P910c, P910a.
- Motorola: A1000, A1010, A920, A925.
- Benq: P30, P31.
- Nokia: 6708.
- Arima: U300, U308.

## 5 - UIQ3 platform smartphones:

- Sony Ericsson: G700, G700c, G700i Business Edition, G702, G900, M600i, M608c, P1c, P1i, P990i, W950i, W958c, W960i
- Motorola: MotoRizr Z8, MotoRizr Z10.

## 6 - Windows Mobile 5/6 devices:

- Acer: Acer Windows Mobile, beTouch E100, beTouch E101, beTouch E200, C510, C530, C531, DX650, DX900, F900, M900, n300, n311, n320, n321, neoTouch P300, neoTouch P400, neoTouch S200, NeoTouch, X960
- Airis: Airis Windows Mobile, T470, T470E, T483, T483L, T610, T620
- Alcatel: One Touch OT-S988W
- Alltel: UTStarcom PPC6700
- Amoi: Amoi Windows Mobile, E70, E72, E75, E76, E78, E850, E860
- AnexTEK: AnexTEK Windows Mobile, moboDA 3160, moboDA 3360, moboDA 3380, SP310
- AnyDATA: AnyDATA Windows Mobile, ASP-210C, ASP-318, ASP-500 GA, ASP-500GA, ASP-505 A, ASP-505A, ASP-505C, ASP-518, ASP-535D, ASP-705W, ASP-725
- Asus: Asus Windows Mobile, Crystal, Halley, Jupiter, Lamborghini ZX1, M530w, M536, M930, Mars II, MyPal A626, MyPal A632, MyPal A636, MyPal A636N, MyPal A639, MyPal A686, MyPal A696, P305, P320, P525, P526, P527, P535, P550, P552w, P560, P565, P735, P750, P835
- AT Mobile: AT Bear, AT Cobra, AT Eagle, AT Falcon, AT Mobile Windows Mobile, AT Pelican, Bear, Cobra, Eagle, Falcon, Pelican
- Athesi: RP1000 QVGA, RP1000 VGA
- ATT: 8525, ATT Windows Mobile, Fuze, Tilt
- Audiovox: 6700, Audiovox Windows Mobile, XV6700
- Avantgarde Sol Steel: Avantgarde Sol Steel
- Axia: A306, A308, Axia Windows Mobile
- Babiken: Vefone V1
- BenQ: BenQ Windows Mobile, E72, P51, T80
- Bluebird: Pidion BIP-1300 CDMA, Pidion BIP-2000 CDMA, Pidion BIP-5300, Pidion BIP-6000 QWERTY, Pidion BIP-6000, Pidion BM-100, Pidion BM-150R CDMA, Pidion BM-150R GSM, Pidion BM-200, Pidion BM-500 CDMA
- Casio: Casio Windows Mobile, DT-X30GR-15, DT-X30GR-15C, DT-X30GR-35, DT-X30GR-35C, DT-X30R-15, DT-X30R-35, IT-800RGC-05, IT-800RGC-15, IT-800RGC-35
- Cingular: 2100, 2125, 3125, 8125, 8500, 8525, Cingular Windows Mobile
- Cinte: A1, A1+, T3238, Verizon Droid X, W71, YotaMAX4G
- Claro: 9100, Claro Windows Mobile
- CyberBank: POZ X501
- Datalogic: Alltel Windows Mobile, Mobile Elf QVGA Numeric, Mobile Elf QVGA QWERTY, Mobile Elf VGA Numeric, Mobile Elf VGA QWERTY, Mobile J Series, Pidion BIP-5000
- Dell: Dell Windows Mobile, X51, X51v
- Dopod: 310, 557w, 577W, 586W, 595, 710 Plus, 818 Pro, 838 Pro, 838, 900, C500, C720W, C730, C750, CHT 9000, D600, D802, D810, D818c, Dopod Windows Mobile, E806c, M700, P100, P800W, S300, S500, S505, S610, S900c, S910, T5388, T5388w, T5399, T5588, T8388, T8588, Touch Cruise, Touch T32381, Touch Viva T2222, U1000

- Emobile: Dual Diamond S22HT, Emonster lite S12HT, Touch Diamond S21HT
- Eriwin: ZX-C5000, ZX-G3+, ZX-K950, ZX-M3, ZX-Q4, ZX-T3333, ZX-T5000
- Eten: Eten Windows Mobile, G500, G500+, Glofiish DX900, Glofiish M750, Glofiish M800, Glofiish M810, Glofiish V900, Glofiish X500, Glofiish X500+, Glofiish X600, Glofiish X610, Glofiish X650, Glofiish X800, Glofiish X900, M550, M600, M600+
- Everex: Everex Windows Mobile, NEON
- Fifth Media: A308, Fifth Media Windows Mobile
- FirstOne: W38
- Fly: Fly Windows Mobile, IQ-110, IQ-120
- FUCHEN: FCB092
- Fujitsu Siemens: Fujitsu Siemens Windows Mobile, Pocket LOOX C550, Pocket LOOX N100, Pocket LOOX N110, Pocket LOOX N500, Pocket LOOX N520, Pocket LOOX N560, Pocket LOOX T810, Pocket LOOX T830
- Garmin-Asus: M10, M10E, M20
- Getac: PS236
- Gigabyte: Gigabyte Windows Mobile, GSmart 2005, GSmart i, GSmart i+, GSmart i120, GSmart i128, GSmart i200, GSmart i300, GSmart i350, GSmart MS800, GSmart MS802, GSmart MS804, GSmart MS808, GSmart MS820, GSmart MW700, GSmart MW702, GSmart MW720, GSmart MW998, GSmart q60, GSmart S1200, GSmart t600
- Gresso: Avantgarde Luna Gold, Avantgarde Luna Steel, Avantgarde Skeleton, Avantgarde Sol Gold, Black Diamonds, Royal Black Diamonds
- Grundig: GR980, Grundig Windows Mobile
- HB: 330
- Hewlett-Packard: Hewlett-Packard Windows Mobile, iPAQ 111 Classic, iPAQ 114 Classic, iPAQ 211 Enterprise, iPAQ 214 Enterprise, iPAQ 500, iPAQ 510, iPAQ 512, iPAQ 514, iPAQ 614 Business, iPAQ 614c, iPAQ 910, iPAQ 912, iPAQ 914c, iPAQ Glisten, iPAQ hw6910, iPAQ hw6915, iPAQ hw6920, iPAQ hw6925, iPAQ hw6940, iPAQ hw6945, iPAQ hw6965, iPAQ hx2190, iPAQ hx2195, iPAQ hx2490, iPAQ hx2495, iPAQ hx2790, iPAQ hx2795, iPAQ hx4705 (Windows Mobile 5), iPAQ K3 Glisten, iPAQ rw6815, iPAQ rw6818, iPAQ rw6828, iPAQ rx1950, iPAQ rx1955, iPAQ Voice Messenger
- Highscreen: Hippo, Nano
- HKC: C880, G1000, G801, G901, G908, G920, Mopad 8, Mopad 8E, Pearl, Prado, W1000
- HP: iPAQ 610, iPAQ 610c, iPAQ 910c, iPAQ 914, iPAQ Data Messenger
- HTC: 5800, 6800, Advantage X7500, Advantage X7501, Advantage X7510, Apache, Artemis, Athena, Atlas, Breeze 100, Breeze, Cavalier, Dash 3G, Douton, Elf, Erato, Excalibur 160, Excalibur, Faraday, Galaxy, Gene, HD Mini, HD2 T9193, HD2, Herald, Hermes, HTC Windows Mobile, Imagio, Kaiser, Kii, Libra 100, Libra, Love, MAX 4G, Mogul, Monet, Mteor, Muse, Nike, Omni, Oxygen, Ozone, P3000, P3300, P3400, P3400i, P3470, P3600, P4350, P6000 Census, Panda, Pharos, Prophet, Pure, Qilin, Raphael, S1200, S310, S411, S620, S621 Excalibur, S630, S640, S650, S710, S740, S743 US, Sedna, Sirius, Snap CDMA, Snap S511, Snap S521, Snap US S522, Snap, Star Trek, Startrek 100, Startrek, Tianxi T9188, Tilt 2, Titan, Tornado Noble, Tornado Tempo, Tornado, Touch 3G T3232, Touch CDMA, Touch Cruise P3650, Touch Cruise, Touch Cruise2, Touch Diamond CDMA P3051, Touch Diamond P3700, Touch Diamond P3702 Victor, Touch Diamond, Touch Diamond2 T5353, Touch Dual P5310, Touch Dual, Touch HD T8282, Touch HD T8285, Touch P3452, Touch Pro, Touch Pro2 CDMA, Touch Pro2 T7381, Touch Pro2, Touch Viva 2223, Touch, Touch2 T3333, Trinity, TyTN, Tytn-II, Universal, Volans, Vox, Whitestone, Wings 100, Wings, Wizard
- Huawei: C8000, C8100
- iCEphone: The Medical Phone
- iDO: P890, S600, S601, S630
- I-Mate: 810F Hummer
- i-mate: 810-F, i-mate Windows Mobile, Jama 101, Jama 201, Jama, Jamin, JAQ, JAQ3, JAQ4, JasJam, JasJar, K-Jam, KJAR, PDA-L, PDA-N, SmartFlip, SP5, SP5m, SP6, SPjas, SPL, Ultimate 5150, Ultimate 6150, Ultimate 7150, Ultimate 8150, Ultimate 8502, Ultimate 9150, Ultimate 9502
- i-teq: Bond, i-teq Windows Mobile, Laser, X-Bond
- IzenMobile: IzenMobile Windows Mobile, KRMA, KSMT
- Kenix: E71, F458, K96, K97, K98, L302, L306, N69, X310, Z310
- Kinpo: Everex NEON, iDO S601, iDO S630, Kinpo Windows Mobile, SP70, SP70R, SP90

- Kyocera: Kyocera Solo
- Laser: mLaser
- Lenovo: ET600, ET860, ET960, ET980, i921, Lenovo Windows Mobile
- LG: CT810, eXpo, Fathom, GM550, GM730, GM730f, GM750, GT810H, GW550, GW820, GW825 IQ, Incite, KC1, KS20, KU2100, LG KT878, LG Windows Mobile, LU2100, MS25, SU210
- Lobster: 700 TV
- M3Mobile: M3 Orange AlphaNumeric M3-20, M3 Orange QWERTY M3-20, M3 T MC-6700S
- Microsoft: KIN ONE, KIN ONEm, KIN TWO, KIN TWOm
- Mio: A502, A702, Explora K70, Explora K75, Mio P550, Mio P560, Mio Windows Mobile, P360, P550, P560
- Mitac: A201, A501, A701, Mio A201, Mio P350, Mitac Windows Mobile
- Mobile Compia: M3 Green MC-6100, M3 Green MC-6300, M3 Green MC-6400, M3 Green MC-6410, M3 Green MC-6600, M3 POS MC-8800, M3 Sky White MC-7100S, M7, MM3 MC-8000
- Mobinnova: ICE 5420, ICE US
- Modeo: Modeo
- Motorola: A3000, A3100, ES400, FR6000, FR68, Franklin, i930, MC35, MC55, MC5574, MC65, MC70 CDMA, MC70 GSM, MC75 CDMA, MC75 GSM, MC9000, MC9090-G, MC909X-K, MC909X-S, MC9500-K CDMA, MC9500-K GSM, MOTO Q, MOTO Q11, MOTO Q8, MOTO Q9c, MOTO Q9h, MOTO Q9m, Motorola Windows Mobile, Norman, Q9
- MWG: Atom V, MWG Windows Mobile, Zinc II
- NDrive: S400
- Neonode: N2, Neonode Windows Mobile
- NTT DoCoMo: dynapocket T-01B, FOMA F1100, hTc Z, PRO series HT-01A, PRO series HT-02A, PRO series SC-01B
- O2: O2 Windows Mobile, XDA Argon, XDA Atmos, XDA Atom Exec, XDA Atom Life, XDA Atom Pure, XDA Atom, XDA Cosmo, XDA Diamond Pro, XDA Exec, XDA Flame, XDA Flint, XDA Graphite, XDA Guide, XDA IQ, XDA Mantle, XDA mini S, XDA Neo, XDA Nova, XDA Orbit, XDA Orion, XDA Phone, XDA Serra, XDA Stealth, XDA Terra, XDA Trion, XDA Venn, XDA Zest, XDA Zinc
- Okwap: K728, K868, K869, K871, Okwap Windows Mobile, S868
- Opticon: H16, H16B, H19, H19B
- Orange: Orange Windows Mobile, SPV C100, SPV C200, SPV C600 Superclub Edition, SPV C600, SPV C700, SPV E600, SPV E650, SPV F600, SPV M3000, SPV M3100, SPV M5000, SPV M600, SPV M650, SPV M700, SPV-E610
- ORSiO: G735, N725 GPS, N725, ORSiO Windows Mobile, P745
- Palm: Palm Windows Mobile, Treo 500, Treo 700w, Treo 700wx, Treo 750, Treo 750v, Treo 800w, Treo Pro CDMA, Treo Pro
- Pantech: DUO C810, Duo, Matrix Pro, Mustang 2, Pantech Duo, Pantech Windows Mobile, PN820
- Paragon Wireless: Hipi-2200, Hipi-2300, Paragon Wireless Windows Mobile
- Pharos: 600 GPS Phone, Pharos Windows Mobile, PTL565E, Traveler 117, Traveler 127, Traveler 137, Traveler 619, Traveller GPS 525
- Philips: D900 Black, D908 Gray, D908 Red, Xenium V816 Black
- Pocket Navigator: PN-3550, PN-3560, PN-P201, PN-P550 A, PN-P550, Pocket Navigator Windows Mobile
- Psion Teklogix: Ikon, Psion Teklogix Windows Mobile, WORKABOUT PRO 3 C, WORKABOUT PRO 3 S QWERTY, WORKABOUT PRO 3 S, WORKABOUT PRO G2, WORKABOUT PRO
- QiGi: AK007, AK007C, AK008C, AK008W, i6C, QiGi W900, Smartbook III U3000, Smartbook III V3000, Smartbook U1000, Smartbook U2000, T900, U6, U6P, U700, U700D, U8, U8P, U96, V800, V808, V880, V96, W700, W700B, W86, W86B
- Qool Labs: QDA Icon, QDA Lite, Qool Labs Windows Mobile, Twins 178
- Qtek: 8300, 8310, 8500, 8600, 9000, 9100, 9600, G100, G200, Qtek Windows Mobile, S200, S310
- Quanta: Apollo, Atom Exec, Atom Pure, Atom, Quanta Windows Mobile
- Quest: Pocket PC6700, Quest Windows Mobile
- Reliance: Mobile Pocket PC



- RoverPC: C6, C7, E5, Evo V7, Evo X7, Evo X8 Black, Evo X8 White, Evo X8, EvoX7, G5, G6, Indigo, M5, N6, N7, P6, P7, Pro G8 Black, Pro G8 White, Q5, Q6, Q7, R5, RoverPC Windows Mobile, S5, S6, S7, S8 Black, S8 Lite, S8 White, S8, W5, X7
- Samsung: Amoled, B7300 Omnia Lite, B7320 Omnia Pro, B7330 Omnia Pro, B7610 Omnia Pro, B7620 Armani 2, B7620 Armani, BlackJack II, Code, Epix, Exec, GT-B5620 OmniaPRO 5, GT-B7300, GT-B7300C, GT-B7320L OmniaPRO, GT-B7330, GT-B7610, GT-B7620, GT-C6620, GT-C6625, GT-C6625v, GT-I8000 Omnia II, GT-I8000L Omnia II, GT-i8000T Omnia Icon, GT-I8000U M2, i910 Omnia I, Multi-Touch, Omnia, Propel Pro, Samsung Windows Mobile, SCH-I329, SCH-I600, SCH-I760, SCH-I770, SCH-I910, SCH-I920, SCH-M480, SCH-M490, SCH-M495, SCH-M620, SCH-M710, SCH-M715, SCH-M720, SCH-M7200, SCH-M830, SGH-i200, SGH-I220, SGH-i310, SGH-i320, SGH-I320n, SGH-I326 Black, SGH-i600, SGH-I607, SGH-I608, SGH-I616, SGH-I617, SGH-I617T, SGH-I627, SGH-I637, SGH-I640, SGH-I640v, SGH-i710, SGH-i718, SGH-I718+, SGH-I720, SGH-I728, SGH-i740, SGH-I740C, SGH-I750, SGH-i760, SGH-i780, SGH-i900 (WITU), SGH-I900 WiTu, SGH-I900L, SGH-I900V, SGH-I907, SGH-I908, SGH-I908E, SPH-i325, SPH-I350, SPH-M4655, SPH-M4800, SPH-M6200 Ultra Messaging, SPH-M7350, SPH-M8100, SPH-M8200, SPH-M8400, WiTu Pro
- SFR: V1605, V1640
- Sharp: 922SH, EM-ONE S01SH, EM-ONE S01SH2, Sharp Windows Mobile, W-ZERO3 (WS004SH)
- Simvalley Mobile: Smartphone XP-25, Smartphone XP-45, Smartphone XP-65
- Socket Mobile: SoMo 650 DX, SoMo 650
- SoftBank: X01T
- Softbank: X02HT, X03HT, X04HT Touch Diamond, X05HT Touch Pro
- Sony Ericsson: M1a Aspen, M1i Aspen, Sony Ericsson Windows Mobile, XPERIA X1, XPERIA X1a, Xperia X2, Xperia X2a
- Sprint: Ace, PPC-6700, Sprint Windows Mobile, Touch Pro, Touch Pro2
- Sunno: Q880, S880
- Swisscom: XPA v1240, XPA v1405
- Tatung: M1, M1A
- TDS: Nomad 800B, Nomad 800L, Nomad 800LC, Nomad 800LE, Ranger 300X, Ranger 500X, TDS Windows Mobile
- TechFaith Wireless: G3000, SPL
- Techfaith Wireless: Pebble
- TechFaith Wireless: G3000, SPL
- TechFaithWireless: Bono, Lancer, Lancer-C, Moffett, Perai 850, Perai-H
- Telecom New Zealand: Apache, Telecom New Zealand Windows Mobile
- TMN: Bluebelt II, Bluebelt, Silverbelt
- T-Mobile: Dash, MDA AMEO, MDA Compact II, MDA Compact III, MDA compact IV, MDA Dash, MDA Mail, MDA Pro, MDA Vario II, MDA Vario, SDA US, Shadow 2009, Shadow, T-Mobile Windows Mobile, Wing, Wings US
- Torg: N100, P120
- Toshiba: Dynapocket KG01, G810, Portege G500, Portege G710, Portege G810, Portege G900, Portege G910, TG01, Toshiba Dynapocket IS02, Toshiba Windows Mobile
- Trimble: Juno SB, Juno SC
- Typhoon: MyGuide Smartphone SP 700
- UBiQUIO: 501, 601, UBiQUIO Windows Mobile
- Unitech: PA600 Phone Edition, PA968II Phone Edition
- UTStarcom: MP6900, SMT5800
- Velocity Mobile: 103, 111, Velocity Mobile Windows Mobile
- Verizon Wireless: PN-820, SMT5800, Touch Diamond, Touch Pro, Touch Pro2, Verizon Wireless Windows Mobile, XV5800, XV6800, XV6900
- Verizon: Verizon Windows Mobile
- Vodafone: 1210, 920, SP 1210, V1230, V1240, v1640, VDA GPS, VDA II, VDA IV, VDA V, Vodafone Windows Mobile, VPA Compact GPS, VPA Compact II, VPA Compact III, VPA Compact IV, VPA Compact s, VPA III, VPA IV
- Voxtel: Voxtel Windows Mobile, W210, W420, W520, W740

- Wanxin: M1
- ZTE: e760, e810, e811, Raise, Xiang
- ZyXel: V660

## 7 - Blackberry devices:

- 8100, 8110, 8120, 8130, 8230 Flip, 8300, 8310, 8320, 8330, 8350i, 8500, 8520, 8530, 8800, 8820, 8830, 8900, 8910, 9100 Pearl 3G, 9105 Pearl 3G, 9300, 9330, 9500, 9520 or 9550, 9520, 9530, 9630 Tour, 9650 Bold, 9670, 9780, 9790, 9800 Torch, 9810, 9850, 9860, BBB, Bold Touch 9220, Bold Touch, Bold, Curve 9350, Curve 9360, Curve 9370, Curve Touch 9380, Flip 8220, IPD, P9981 Porsche Design, Storm 9530T

## 8 - Samsung phones:

- Acclaim, Admire, Amoled, B7300 Omnia Lite, B7320 Omnia Pro, B7330 Omnia Pro, B7610 Omnia Pro, B7620 Armani 2, B7620 Armani, Behold II, BlackJack II, Captivate Glide, Captivate, Code, Conquer 4G, Continuum, Dart, DoubleTime, Droid Charge, Epic 4g, Epix, Exec, Exhibit 4G, Fascinate, Galaxy 3, Galaxy 551, Galaxy Ace 2, Galaxy Ace, Galaxy Apollo, Galaxy Europa, Galaxy Fit, Galaxy Gio, Galaxy Lite, Galaxy Mini, Galaxy Neo, Galaxy Nexus, Galaxy Note, Galaxy Pop, Galaxy Portal, Galaxy Prevail, Galaxy Pro, Galaxy Q, Galaxy R, Galaxy S Hoppin, Galaxy S i909, Galaxy S II 4G, Galaxy S II Epic 4G Touch, Galaxy S II Skyrocket, Galaxy S Plus, Galaxy S sLCD, Galaxy S Wi-Fi 4.0 (G1), Galaxy S Wi-Fi 5.0 (G70), Galaxy SII, Galaxy Tab 10.1 (Verizon 4G LTE), Galaxy Tab 10.1 (Wi-Fi Only), Galaxy Tab 7.0 (ATT), Galaxy Tab 7.0 (CDMA), Galaxy Tab 7.0 (Sprint), Galaxy Tab 7.0 (T-Mobile), Galaxy Tab 7.0 (Wi-Fi Only), Galaxy Tab 8.9 (Wi-Fi Only), Galaxy Tab, Galaxy Y, Gem, Giorgio Armani, Gravity SMART, GT-B5510 Galaxy Y Pro, GT-B5620 OmniaPRO 5, GT-B7300, GT-B7300C, GT-B7320L OmniaPRO, GT-B7330, GT-B7610, GT-B7620, GT-B7800 Galaxy M Pro, GT-C6620, GT-C6625, GT-C6625v, GT-I5700 Galaxy Spica, GT-i5800L Apollo, GT-I7110, GT-I7500 Galaxy, GT-I7500L Galaxy, GT-I8000 Omnia II, GT-I8000L Omnia II, GT-i8000T Omnia Icon, GT-I8000U M2, GT-I8150, GT-I8320 Protector, GT-I8520 Galaxy Beam, GT-I8530 Galaxy Beam, GT-I9000 Galaxy S, GT-I9000M Galaxy S Vibrant, GT-I9008 Galaxy S, GT-I9020T Nexus S, GT-I9070 Galaxy S Advance, GT-I9070P Galaxy S Advance NFC, GT-I9100 Galaxy SII, GT-I9203 Google Nexus S, GT-I9210 Galaxy S II LTE EU, GT-I9250 Galaxy Nexus, GT-N7000B Galaxy Note, GT-N8000 Galaxy Note 10.1, GT-N8010 Galaxy Note 10.1 WiFi, GT-P1000N Galaxy Tab 7.0, GT-P3100 Galaxy Tab 2 7.0, GT-P3110 Galaxy Tab 2 7.0 WiFi, GT-P5100 Galaxy Tab 2 10.1, GT-P5110 Galaxy Tab 2 10.1 WiFi, GT-P6200 Galaxy Tab 7.0 Plus, GT-P6201 Galaxy Tab 7.0 Plus N, GT-P6210 Galaxy Tab 7.0 Plus WiFi, GT-P6211 Galaxy Tab 7.0 Plus N, GT-P6800 Galaxy Tab 7.7, GT-P6810 Galaxy Tab 7.7 WiFi, GT-P7100 Galaxy Tab 10.1v, GT-P7300 Galaxy Tab 8.9, GT-P7320 Galaxy Tab 8.9 LTE, GT-P7500 Galaxy Tab 10.1, GT-P7501 Galaxy Tab 10.1N, GT-P7560 Galaxy Tab 7.0 Plus 16GB, GT-S5300 Galaxy Pocket, GT-S5512 Galaxy Y Pro Duos, GT-S5830T Galaxy Ace, GT-S6102 Galaxy Y Duos, GT-S6500 Galaxy Mini 2, GT-S6500D Galaxy Mini 2 NFC, GT-S7500 Galaxy Ace Plus, i910 Omnia I, Illusion, Indulge, Infuse 4G, INNOV8 (I8510), Instinct Android, InstinctQ, Intercept, Mesmerize, Moment 2, Moment, Multi-Touch, Nexus S (Indian), Nexus S (T-Mobile), Nexus S 4G (CDMA), Nexus S, OMNIA HD, Omnia, Propel Pro, Replenish, Repp, Samsung Windows Mobile, Saturn, SC-05D Galaxy Note LTE, SCH-I329, SCH-I405U Stratosphere 4G, SCH-I600, SCH-I760, SCH-I770, SCH-I815 Galaxy Tab 7.7, SCH-I889 Galaxy Note, SCH-I899, SCH-I910, SCH-I920, SCH-M480, SCH-M490, SCH-M495, SCH-M510, SCH-M620, SCH-M710, SCH-M715, SCH-M720, SCH-M7200, SCH-M830, SCH-R910 Galaxy Indulge, SCH-R940 4G LTE, SCH-U350 Smooth, SCH-W899, SGH-A137, SGH-A226, SGH-A227, SGH-A237, SGH-A26A, SGH-A437, SGH-A516, SGH-B110, SGH-B110L, SGH-B130, SGH-B130S, SGH-B138, SGH-B210, SGH-BC01, SGH-C160, SGH-C160B, SGH-C160G, SGH-C161, SGH-C165, SGH-C168, SGH-C168B, SGH-C180, SGH-C280, SGH-C288, SGH-C327, SGH-C420, SGH-C425, SGH-C426, SGH-C450, SGH-C458, SGH-CC03, SGH-D488, SGH-D500, SGH-D500E, SGH-D508, SGH-D510, SGH-D600, SGH-D600E, SGH-D608, SGH-D610, SGH-D618, SGH-D700, SGH-D710, SGH-D720, SGH-D728, SGH-D730, SGH-D820, SGH-D820E, SGH-D828, SGH-D828E, SGH-D888+, SGH-D900, SGH-D900i, SGH-D908, SGH-D908i, SGH-E100, SGH-E108, SGH-E1110, SGH-E200, SGH-E200B, SGH-E208, SGH-E208B, SGH-E236, SGH-E250, SGH-E250D, SGH-E250i, SGH-E250W, SGH-E251, SGH-E251C, SGH-E256, SGH-E258, SGH-E258D, SGH-E330, SGH-E330C, SGH-E330N, SGH-E335, SGH-E338, SGH-E340, SGH-E348, SGH-E350, SGH-E358, SGH-E360, SGH-E368, SGH-E370, SGH-E370L, SGH-E378, SGH-E380, SGH-E388, SGH-E390, SGH-E398, SGH-E420, SGH-E428, SGH-E480, SGH-E488, SGH-E500, SGH-E508, SGH-E590, SGH-E598, SGH-E630, SGH-E630C, SGH-E638, SGH-E640, SGH-E648, SGH-E690, SGH-E698, SGH-E700, SGH-E700A, SGH-E708, SGH-E730, SGH-E736, SGH-E738, SGH-E740, SGH-E746, SGH-E747, SGH-E748, SGH-E750, SGH-E758, SGH-E760, SGH-E768, SGH-E780, SGH-E788, SGH-E800, SGH-E800C, SGH-E808, SGH-E820, SGH-E830, SGH-E838, SGH-E840i, SGH-E848i, SGH-E890, SGH-E898, SGH-F110, SGH-F118, SGH-F150, SGH-F158, SGH-

F250, SGH-F250L, SGH-F258, SGH-F260, SGH-F265, SGH-F268, SGH-F270, SGH-F270L, SGH-F278, SGH-F480L, SGH-F480V, SGH-F488E, SGH-G600, SGH-G608, SGH-G618, SGH-G808E, SGH-G810, SGH-i200, SGH-I220, SGH-i310, SGH-i320, SGH-I320n, SGH-I326 Black, SGH-i400, SGH-i450, SGH-i520, SGH-i550, SGH-i560, SGH-i570, SGH-i600, SGH-I607, SGH-I608, SGH-I616, SGH-I617, SGH-I617T, SGH-I627, SGH-I637, SGH-I640, SGH-I640v, SGH-i710, SGH-I717 Galaxy Note LTE, SGH-i718, SGH-I718+, SGH-I720, SGH-I728, SGH-i740, SGH-I740C, SGH-I750, SGH-I757 Galaxy S II Skyrocket HD LTE, SGH-i760, SGH-i780, SGH-I847 Rugby Smart, SGH-I858, SGH-i900 (WITU), SGH-I900 WiTu, SGH-I900L, SGH-I900V, SGH-I907, SGH-I908, SGH-I908E, SGH-I957 Galaxy Tab 8.9 4G LTE, SGH-J150, SGH-J158, SGH-J210, SGH-J218, SGH-J700, SGH-J700L, SGH-J700V, SGH-J706, SGH-J708, SGH-J708C, SGH-J808E, SGH-L250, SGH-L258, SGH-L310, SGH-L318, SGH-L600, SGH-L608, SGH-L750, SGH-L870, SGH-M110, SGH-M120, SGH-M130L, SGH-M140, SGH-M150, SGH-M158, SGH-M3510, SGH-M610, SGH-M618, SGH-P180, SGH-P200, SGH-P220, SGH-P240, SGH-P260, SGH-P780, SGH-P788, SGH-P850, SGH-P858, SGH-P906, SGH-S500, SGH-S508, SGH-T101, SGH-T101G, SGH-T109, SGH-T209, SGH-T219, SGH-T229, SGH-T301, SGH-T309, SGH-T319, SGH-T329, SGH-T329, SGH-T336, SGH-T339, SGH-T409, SGH-T429, SGH-T439, SGH-T459, SGH-T509, SGH-T619, SGH-T679 Exhibit II 4G, SGH-T709, SGH-T729, SGH-T739, SGH-T769 Galaxy S Blaze 4G, SGH-T809, SGH-T869 Galaxy Tab 7.0 Plus 4G, SGH-T959D Galaxy S Fascinate 3G+, SGH-T959V Galaxy S 4G, SGH-T989 Galaxy SII, SGH-U708E, SGH-U808E, SGH-U900, SGH-U900L, SGH-U908E, SGH-X100, SGH-X108, SGH-X437, SGH-X460, SGH-X490, SGH-X495, SGH-X497, SGH-X540, SGH-X550, SGH-X560, SGH-X560L, SGH-X566, SGH-X576, SGH-X600, SGH-X600A, SGH-X608, SGH-X620, SGH-X628, SGH-X640, SGH-X648, SGH-X650, SGH-X658, SGH-X670, SGH-X678, SGH-X690, SGH-X698, SGH-X700, SGH-X708, SGH-Z600, Showcase, SHV-E140S Galaxy Tab 8.9 LTE M32, SHV-E150S Galaxy Tab 7.7 LTE, SHW-M100S Galaxy A, SHW-M110S Galaxy S, SPH-i325, SPH-I350, SPH-L700 Galaxy Nexus 4G LTE, SPH-M4655, SPH-M4800, SPH-M6200 Ultra Messaging, SPH-M7350, SPH-M8100, SPH-M8200, SPH-M8400, Stratosphere Galaxy S, Transfix, Transform Ultra, Transform, Vibrant, WiTu Pro, YP-G1CW Galaxy S WiFi 4.0, YP-G1EW Galaxy S WiFi 4.0, YP-G70CW Galaxy S WiFi 5.0, YP-G70EW Galaxy S WiFi 5.0, YP-GB1EW Galaxy Player 16GB, YP-GB70EW Galaxy Player 70 16GB, YP-GB70NW Galaxy Player 70 32GB, YP-GP50 Galaxy Player 50, YP-MB2 Yepp

## 9 – Motorola phones:

- A1000, A1010, A3000, A3100, A810, A845, A920, A925, Admiral XT603, Atrix 2 MB865, Atrix 2 ME865, Atrix 3 MB886, ATRIX 4G, Atrix MB861, ATRIX, BACKFLIP ME600, BackFlip, Bionic XT875, Bravo MB520, Bravo, C380, C650, C980, CHARM, Citrus WX445, CITRUS, CLIQ (DEXT), CLIQ 2, Defy Mini XT320, DEFY, DEFY+, Destino i867, DEVOUR, DROID 2 Global, DROID 3, DROID 4 XT894, DROID Bionic XT875, DROID RAZR HD XT926, DROID RAZR XT912, DROID X, DROID X2 MB870, DROID XYBOARD 8.2 MZ609 32GB, DROID XYBOARD MZ617 4G LTE 64GB, DROID, DROID2 A955, DROID3 XT862, E1000, E1070, E380, E398, E550, E770, Electrify, ES400, ET1 Enterprise Tablet, EX108, EX109, EX112, EX115, EX118, EX119, EX122, EX126, EX128, EX211, EX212, EX223, EX245, EX292, FIRE XT XT530, FIRE XT317, FIRE, FLIPOUT, FLIPSIDE, FR6000, FR68, Franklin, i1, i930, i940, Kronos MB6112, L2, L6, L6i, MC35, MC55, MC5574, MC65, MC70 CDMA, MC70 GSM, MC75 CDMA, MC75 GSM, MC9000, MC9090-G, MC909X-K, MC909X-S, MC9500-K CDMA, MC9500-K GSM, Milestone 2 A953, MILESTONE 2, Milestone 3 ME863, MILESTONE 3 XT883, Milestone A854, MILESTONE, MING MT810, MOTO A1260, MOTO A1680, MOTO GLAM XT800w, MOTO GLAM, MOTO MB612, MOTO ME525, MOTO ME525+, MOTO ME632, MOTO ME811, MOTO MIX, MOTO MT620, MOTO MT680, MOTO MT716, MOTO MT810lx, MOTO MT870, MOTO MT917, MOTO Q, MOTO Q11, MOTO Q8, MOTO Q9c, MOTO Q9h, MOTO Q9m, MOTO QRTY, MOTO W388, MOTO XT301, MOTO XT316, MOTO XT319, MOTO XT390, MOTO XT531, MOTO XT532, MOTO XT560, MOTO XT615, MOTO XT681, MOTO XT701, MOTO XT702, MOTO XT711, MOTO XT760, MOTO XT800, MOTO XT806, MOTO XT861, MOTO XT882, MOTO Z9 (Z9N), MOTO ZN200, MOTOACTV W6, MOTOKRZR K1, MOTOKRZR K3, MOTOLUXE, MOTOPEBL U3, MOTOPEBL U6, MOTORAZR maxx V6, MOTORAZR V3 (CLDC 1.0), MOTORAZR V3 (CLDC 1.1), MOTORAZR V3, MOTORAZR V3e, MOTORAZR V3i, MOTORAZR V3im, MOTORAZR V3r, MOTORAZR V3re, MOTORAZR V3t, MOTORAZR V3v, MOTORAZR V3x, MOTORAZR V3xx, MOTORAZR2 V8, MOTORAZR2 V9, MOTORAZR2 V9x, MOTORIZR Z3, MotoRizr Z8, MOTOROKR E1, MOTOROKR E8, MOTOROKR EM28 (EM330), MOTOROKR EM30, Motorola Windows Mobile, MOTOSLVR L7, MOTOSLVR L72, MOTOSLVR L7i, L7e, MOTOSLVR L9, MOTOSMART Flip XT611, MOTOZINE ZN5, MT710 Zhiling, Norman, PHOTON 4G, PRO XT610, Pro+ MB632, Q9, QUENCH XT3, QUENCH XT5, QUENCH, RARZ XT909, RAZR XT910, ROKR EM25 (MOTO EM325), SPICE Key, SPICE, T720, T720i, T721, T725, TITANIUM, TRIUMPH, V1050, V1100, V180, V195, V197, V220, V220ENS, V300, V360, V365, V400, V500, V550, V551, V600, V620, V635, V80, V975, V980, VE538, W230, W270, W490, WX160, WX161, WX180, WX181, WX260, WX265, WX280, WX288, WX290, WX295, WX306, WX345, WX390, WX395, XOOM MZ505 Family Edition, XOOM MZ602 4G LTE, XOOM, XOOM2 Media Edition MZ608, XOOM2 Media Edition WiFi MZ607, XOOM2 MZ616, XOOM2 WiFi MZ615, XT535 Defy XT, XT800c Titanium, XT860 4G, XT928, Z10, ZN4

## 10 – Apple devices:

- Generic device, iPad 2 WiFi CDMA, iPad 2 WiFi GSM, iPad 2 WiFi, iPad, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S, iPhone, iPod Touch, new iPad CDMA, new iPad GSM, new iPad WiFi

## 11 - Android devices:

- 1und1: SmartPad
- Acer: beTouch E110 B, beTouch E110, beTouch E120 black, beTouch E120 white, beTouch E130, beTouch E140, beTouch E210, beTouch E400, Iconia Smart S300, ICONIA TAB A100, Iconia Tab A200, ICONIA TAB A500, Iconia Tab A501, Iconia Tab A510, Iconia Tab, Liquid A1, Liquid E Ferrari Edition, Liquid E, Liquid Express E320, Liquid Metal S120, Liquid mini E310 B, Liquid mt, Liquid Stream
- Ainol: mini NOVO5 Basic, NOVO7 Advanced, NOVO7 Basic, NOVO8 Advanced
- Alcatel: One Touch OT-890, One Touch OT-890D, One Touch OT-906, One Touch OT-908, One Touch OT-908F, One Touch OT-909S, One Touch OT-910, One Touch OT-915, One Touch OT-918D, One Touch OT-980, One Touch OT-980A, One Touch OT-981A, One Touch OT-985, One Touch OT-985D, One Touch OT-985N, One Touch OT-990, One Touch OT-990A, One Touch OT-995, OT-891 Soul, Venture
- Altek: Leo A14
- Amazon: Kindle Fire
- Archos: 101 G9 Turbo, 101 G9, 80 G9 Turbo, 80 G9, A101 Internet Tablet, A28 Internet Tablet, A32 Internet Tablet, A43 Internet Tablet, A48 Internet Tablet, A5 Internet Tablet, A7 Home Tablet, A70 Internet Tablet, A8 Home Tablet
- Asus: Eee Pad MeMO 171 ME370T, Eee Pad MeMO 3D, Eee Pad Slider SL101, Eee Pad Transformer Prime TF201, Eee Pad Transformer Prime TF300T, Eee Pad Transformer TF101, Eee Pad Transformer TF101G, Eee Pad Transformer TF101-WiMAX, ETBW11AA, Padfone
- BeeLine: E300
- Blu: Magic, Tango
- Camangi: FM600, WebStation
- Casio: Casio GzOne Commando
- China Mobile: Mini 3i
- Cinte: 4gs Android A8, A738, C700, C703, C708, C709, CT001, Desire HD V8, FG8, G2, i9000 mini, Legend G6, Star A2000, Star A3, Star A3000, Star A5000, Star A9000, ZT-180 A9 EPAD
- Commtiva: Linx N700
- CompuLab: Exeda Android 1.6
- Creative: ZEN Touch 2, Zii Egg, ZiiO 10, ZiiO 7
- DataWind: Aakash 2 UbiSlate 7+
- Dell: Aero, Flash, Mini3i, Mini3iX, Mini5, Streak 10 Pro WiFi, Streak 7 Wi-Fi, Streak 7, Streak Pro 101DL, Streak, Venue Pro, Venue, XCD28, XCD35
- Diadem: MG902, MG909, MG910, MG986, MG988, MP308, MP310, MS830, MS831, MS907, MS908
- DoCoMo: HT-03A
- Dopod: A3288, A6388, A8188, Hero A6288, Magic A6188, Magic A6188w
- Dreambook: W7
- Eken: M001, M002, M003, M005, M006
- enTourage: eDGe
- Era: G1
- Eriwin: ZX-A101, ZX-A103, ZX-A1200, ZX-A3, ZX-A3000, ZX-A5, ZX-A5000, ZX-A7000, ZX-A738, ZX-A8300 TV WIFI GPS, ZX-A8500, ZX-A9100, ZX-A919, ZX-A9191, ZX-A920, ZX-B1000, ZX-B63M, ZX-B72M, ZX-E909, ZX-F603, ZX-F606, ZX-FG10, ZX-FG8, ZX-FN8, ZX-G12, ZX-G14, ZX-G17, ZX-G2, ZX-G510, ZX-H2000, ZX-H400, ZX-H4000, ZX-H4300, ZX-H7000, ZX-H7300, ZX-HD7, ZX-I9100, ZX-K600A, ZX-L601, ZX-LT181, ZX-T710, ZX-T8500, ZX-W690, ZX-W7272, ZX-WG1107, ZX-X151, ZX-X181, ZX-X191, ZX-Y801, ZX-Y803

- Exper: Easypad Tablet P10AN, Easypad Tablet P10ANG
- FirstOne: F910 B, F910, GW10, P5b, P5g, P5w, P7b, P7g, P7w
- Forsa: Posh.Pad MV7
- FUCHEN: A101, A103, A1-1, A2, A3, FC1002, FC701, FC702, FC703, FC705, FC707, FC801, FCB048, FCB703, FCR233, FCR235, MID97, S610, S710, S720, S810, S820
- Fujitsu Toshiba: IS11T Regza phone, ISW11F ARROWS Z
- Fujitsu: Arrows ES F-07D, Arrows ES IS12F, ARROWS X LTE F-05D, F-03D Girls, F-12C, Stylistic M350, CA2, Stylistic M532
- Garmin-Asus: A10, A50
- Geeksphone: One, Zero
- General Mobile: Cosmos, DSTL1
- Gigabyte: GSmart G1305 Boston, GSmart G1310, GSmart G1310D, GSmart G1315 Skate, GSmart G1317 Rola, GSmart G1317D, GSmart G1345, GSmart G1355, GSmart S1205
- Google: Android Phone
- Hannspree: HANNS pad SN-10T1, HANNS pad SN-10T4, HANNS pad SN-70T1
- HB: 330(Q8), A101, A1-01, A103, A2, C3-01, GPS2000, L900, Q9, W102, W105
- hengda: E7, Star A1000, Star A2000, Star A3000, Star A7000, Star A910, Star X12, WG1107, WG2000
- Hero: H200
- Hewlett-Packard: Compaq AirLife 100
- Highscreen: PP5420, Zeus
- Hivision: PWS700CA
- HOTT: MD500
- HTC: Aria A6380, Aria, ChaChaCha, Click, Desire A8183, Desire ADR6200, Desire ADR6275, Desire HD A9191, Desire VC T328d, Desire X06HT, Desire Z A7272, Desire, Doubleshot, Dream, Droid Eris A6376, Droid Incredible 2 ADR6350, Droid Incredible 2, Droid Incredible 4G ADR6410, Droid Incredible ADR6300, Droid Incredible, Edge, Eris, EVO 4G, Evo Design 4G, EVO Shift 4G, EVO View 4G, EVO WiMAX ISW11HT, Explorer, Flyer 4G P515E, Flyer P510E, Flyer Wi-Fi P512, Gratia, Hero A6265, Hero A6277, Hero S, Hero, Icon, Incredible S (Vivo), Incredible S(Vivo), Inspire 4G, J ISW13HT, Jetstream, Lead, Legend A6365 Bell, Legend, Lexikon (Merge), Magic, Nexus One, One S (Ville), One S Z250E, One V T320e (Primo), One X Lte, One X S720e, One XT S720t, Panache 4G (Emerald), Pyramid, Quattro, Raider 4G, Rezound, Rhyme, Rider, Saga (Desire S), Salsa (Weike), Sensation XE, Sensation XL, Shooter (ShooterU), Status, T328w (Wind), T9199, Tattoo, Thunderbolt 4G, Thunderbolt, Tianxi A9188, Triumph A8182, Ville, Vivid, Vivo (Incredible S), Vivo\_w, Wildfire A315c, Wildfire A3335, Wildfire A3360, Wildfire A3380, Wildfire ADR6225, Wildfire S (Marvel), Wildfire S A510c, Wildfire
- Huawei: Ascend D quad XL, Ascend D1, Ascend G300 NFC, Ascend G300, Ascend G300C, Ascend G312, Ascend II, Ascend M860, Ascend P1 S, Ascend P1, Ascend Y100, Ascend Y200, Boulder U8350, Deuce U8520, Emobile GS03, Glory M886, Ideos S7 Slim, Ideos S7-103, Ideos S7-104, Ideos S7-105, Ideos S7-201u Slim, Ideos U8150, Ideos X1 Gaga, Ideos X3, Ideos X5 Pro, Ideos X5 U8800, Ideos X5 U8800H, M660, M835, M865, MediaPad 10 FHD, MediaPad 10 WiFi S10-101w, S7-301c MediaPad, S7-301u MediaPad, S7-302u MediaPad 4G, Sonic U8650, Sonic U8652, T8301, U8100, U8110, U8160, U8220, U8230, U8300, U8500, U8860, U9000, Vision
- Hyndai: A7
- ICD: Ultra, Vega
- INQ: Cloud Touch
- Interpad: 10 Home Edition
- Inventec: N18 Dr. eye, N18C Dr. eye
- KDDI: iida INFOBAR A01
- Kenix: A01, F458, Q7, Q8, V6, X1
- Kyocera: DIGNO ISW11K, Echo M9300, HONEY BEE 101K, Milano, Zio M6000
- Lava: Xolo X900

- Lenovo: IdeaPad Tablet A1 WiFi, IdeaPad Tablet K1 WiF, IdeaTab S2 10, IdeaTab S2109, K800, LePad A1-07 WiFi, LePad S2005, LePad S2007, LePad S2010, LePhone K2, LePhone S2, LePhone S2-38AT0, LePhone, Mobile O1 ET70, oPhone
- LG: Ally, Aloha, Andro-1, Apex, Axis, C550 Optimus Chat, C729 DoublePlay, C800 myTouch Q, Cosmos Touch, E2, E400 Optimus L3, E510 Optimus Hub, E610 Optimus L5, E739 myTouch, Enlighten, Esteem 4G, Etna, Eve, F100L Optimus Vu, F100S Optimus Vu, F120L Optimus LTE Tag, G2x P999, Genesis, GW880, KU5900 Optimus Black, LS670 Optimus S, LS696 Optimus Elite, LS840 Viper 4G, LU6200 Optimus LTE, LU6500 Optimus Q2, LU8800 Optimus Q2, Marquee, MS690 Optimus M, MS695 Optimus M+, MS840 Connect 4G, MS910 Esteem 4G, Optimus 2X, Optimus 3D, Optimus Big, Optimus Black, Optimus Chic, Optimus Link, Optimus Mach, Optimus Me, Optimus Net, Optimus One, Optimus Pro, Optimus Q, Optimus S, Optimus Slider, Optimus Sol, Optimus Z, Optimus, P504 Optimus T, P509 Optimus T, P692 Optimus Net, P720 Optimus 3D Max, P720H Optimus 3D Max, P925 Thrill 4G, P929 Thrill 4G, P930 Nitro HD, P936 Optimus LTE, P940 Prada 3.0 (LG K2), Revolution, SU370 Optimus One, SU640 Optimus LTE, SU870 Optimus 3D Cube, SU880 Optimus EX, US670 Optimus U, V900 Optimus Pad, V905 Optimus Pad, V909 G-Slate, VM670 Optimus V, VM696 Optimus Elite, VN270 Cosmos Touch, VS 920 Spectrum 4G, VS660 Vortex, VS840 Lucid 4G
- MAG: iMiTO iM7, iMiTO iM7S
- Meizu: M9, MX
- MENQ: EasyPC E790 Android
- Micromax: A60, A70
- Motorola: Admiral XT603, Atrix 2 MB865, Atrix 2 ME865, Atrix 3 MB886, ATRIX 4G, Atrix MB861, ATRIX, BACKFLIP ME600, BackFlip, Bionic XT875, Bravo MB520, Bravo, CHARM, Citrus WX445, CITRUS, CLIQ (DEXT), CLIQ 2, Defy Mini XT320, DEFY, DEFY+, Destino i867, DEVOUR, DROID 2 Global, DROID 3, DROID 4 XT894, DROID Bionic XT875, DROID RAZR HD XT926, DROID RAZR XT912, DROID X, DROID X2 MB870, DROID XYBOARD 8.2 MZ609 32GB, DROID XYBOARD MZ617 4G LTE 64GB, DROID, DROID2 A955, DROID3 XT862, Electrify, ET1 Enterprise Tablet, FIRE XT XT530, FIRE XT317, FIRE, FLIPOUT, FLIPSIDE, i1, i940, Kronos MB6112, Milestone 2 A953, MILESTONE 2, Milestone 3 ME863, MILESTONE 3 XT883, Milestone A854, MILESTONE, MING MT810, MOTO A1260, MOTO A1680, MOTO GLAM XT800w, MOTO GLAM, MOTO MB612, MOTO ME525, MOTO ME525+, MOTO ME632, MOTO ME811, MOTO MIX, MOTO MT620, MOTO MT680, MOTO MT716, MOTO MT810lx, MOTO MT870, MOTO MT917, MOTO QRTY, MOTO XT301, MOTO XT316, MOTO XT319, MOTO XT390, MOTO XT531, MOTO XT532, MOTO XT560, MOTO XT615, MOTO XT681, MOTO XT701, MOTO XT702, MOTO XT711, MOTO XT760, MOTO XT800, MOTO XT806, MOTO XT861, MOTO XT882, MOTOLUXE, MOTOSMART Flip XT611, MT710 Zhiling, PHOTON 4G, PRO XT610, Pro+ MB632, QUENCH XT3, QUENCH XT5, QUENCH, RARZ XT909, RAZR XT910, SPICE Key, SPICE, TITANIUM, TRIUMPH, XOOM MZ505 Family Edition, XOOM MZ602 4G LTE, XOOM, XOOM2 Media Edition MZ608, XOOM2 Media Edition WiFi MZ607, XOOM2 MZ616, XOOM2 WiFi MZ615, XT535 Defy XT, XT800c Titanium, XT860 4G, XT928, ZN4
- Nec: LifeTouch NOTE, Medias ES N-05D, MEDIAS N-01D, MEDIAS N-06C, Smartia
- NEC: Medias CH 101N, Medias LTE N-04D, Medias N-04C, Medias Tab N-06D LTE, Medias WP N-06C
- Nec: LifeTouch NOTE, Medias ES N-05D, MEDIAS N-01D, MEDIAS N-06C, Smartia
- NEC: Medias CH 101N, Medias LTE N-04D, Medias N-04C, Medias Tab N-06D LTE, Medias WP N-06C
- Nec: LifeTouch NOTE, Medias ES N-05D, MEDIAS N-01D, MEDIAS N-06C, Smartia
- NEC: Medias CH 101N, Medias LTE N-04D, Medias N-04C, Medias Tab N-06D LTE, Medias WP N-06C
- Nec: LifeTouch NOTE, Medias ES N-05D, MEDIAS N-01D, MEDIAS N-06C, Smartia
- NEC: Medias CH 101N, Medias LTE N-04D, Medias N-04C, Medias Tab N-06D LTE, Medias WP N-06C
- Nec: LifeTouch NOTE, Medias ES N-05D, MEDIAS N-01D, MEDIAS N-06C, Smartia
- Notion Ink: Adam Variant A, Adam Variant B
- NTT DoCoMo: Lynx 3D SH-03C
- Olivetti: OliPad 100, OliPad 110
- Onkyo: TA117C1, TA117C3
- Optima: OP5-E
- Optimus: Boston
- Orange: San Francisco, Santa Clara, Tahiti
- Panasonic: ELUGA Power, ELUGA, LUMIX Phone 101, LUMIX Phone 102P, P-07C, Sweety SoftBank 003P, Toughpad FZ-A1

- Pantech: Breakout, Burst, Crossover P8000, Element, IM-A690S SKY, Pocket, Sirius Alpha, SKY Izar IM-A630K, SKY Mirach A, SKY Mirach IS11PT, SKY Vega LTE EX IM-A820L, SKY Vega X IM-A720L, Vega LTE IM-A800S SKY, Vega LTE M IM-A810S SKY, Vega Racer IM-A760S, Vega Racer IM-A770K, Vega Racer IM-A780L
- Philips: GoGear Connect, T910 White, V808 Black, V900 Black, V900 Silver, V900 White, V900
- PocketBook: A10, A7
- QiGi: A1, i3
- Qigi: i6
- Rogers: Dream
- RoverPC: RoverPad 3W G70
- Samsung: Acclaim, Admire, Behold II, Captivate Glide, Captivate, Conquer 4G, Continuum, Dart, DoubleTime, Droid Charge, Epic 4g, Exhibit 4G, Fascinate, Galaxy 3, Galaxy 551, Galaxy Ace 2, Galaxy Ace, Galaxy Apollo, Galaxy Europa, Galaxy Fit, Galaxy Gio, Galaxy Lite, Galaxy Mini, Galaxy Neo, Galaxy Nexus, Galaxy Note, Galaxy Pop, Galaxy Portal, Galaxy Prevail, Galaxy Pro, Galaxy Q, Galaxy R, Galaxy S Hoppin, Galaxy S i909, Galaxy S II 4G, Galaxy S II Epic 4G Touch, Galaxy S II Skyrocket, Galaxy S Plus, Galaxy S scLCD, Galaxy S Wi-Fi 4.0 (G1), Galaxy S Wi-Fi 5.0 (G70), Galaxy SII, Galaxy Tab 10.1 (Verizon 4G LTE), Galaxy Tab 10.1 (Wi-Fi Only), Galaxy Tab 7.0 (ATT), Galaxy Tab 7.0 (CDMA), Galaxy Tab 7.0 (Sprint), Galaxy Tab 7.0 (T-Mobile), Galaxy Tab 7.0 (Wi-Fi Only), Galaxy Tab 8.9 (Wi-Fi Only), Galaxy Tab, Galaxy Y, Gem, Giorgio Armani, Gravity SMART, GT-B5510 Galaxy Y Pro, GT-B7800 Galaxy M Pro, GT-I5700 Galaxy Spica, GT-i5800L Apollo, GT-I7500 Galaxy, GT-I7500L Galaxy, GT-I8320 Protector, GT-I8520 Galaxy Beam, GT-I8530 Galaxy Beam, GT-I9000 Galaxy S, GT-I9000M Galaxy S Vibrant, GT-I9008 Galaxy S, GT-I9020T Nexus S, GT-I9070 Galaxy S Advance, GT-I9070P Galaxy S Advance NFC, GT-I9100 Galaxy SII, GT-I9203 Google Nexus S, GT-I9210 Galaxy S II LTE EU, GT-I9250 Galaxy Nexus, GT-N7000B Galaxy Note, GT-N8000 Galaxy Note 10.1, GT-N8010 Galaxy Note 10.1 WiFi, GT-P1000N Galaxy Tab 7.0, GT-P3100 Galaxy Tab 2 7.0, GT-P3110 Galaxy Tab 2 7.0 WiFi, GT-P5100 Galaxy Tab 2 10.1, GT-P5110 Galaxy Tab 2 10.1 WiFi, GT-P6200 Galaxy Tab 7.0 Plus, GT-P6201 Galaxy Tab 7.0 Plus N, GT-P6210 Galaxy Tab 7.0 Plus WiFi, GT-P6211 Galaxy Tab 7.0 Plus N, GT-P6800 Galaxy Tab 7.7, GT-P6810 Galaxy Tab 7.7 WiFi, GT-P7100 Galaxy Tab 10.1v, GT-P7300 Galaxy Tab 8.9, GT-P7320 Galaxy Tab 8.9 LTE, GT-P7500 Galaxy Tab 10.1, GT-P7501 Galaxy Tab 10.1N, GT-P7560 Galaxy Tab 7.0 Plus 16GB, GT-S5300 Galaxy Pocket, GT-S5512 Galaxy Y Pro Duos, GT-S5830T Galaxy Ace, GT-S6102 Galaxy Y Duos, GT-S6500 Galaxy Mini 2, GT-S6500D Galaxy Mini 2 NFC, GT-S7500 Galaxy Ace Plus, Illusion, Indulge, Infuse 4G, Instinct Android, InstinctQ, Intercept, Mesmerize, Moment 2, Moment, Nexus S (Indian), Nexus S (T-Mobile), Nexus S 4G (CDMA), Nexus S, Replenish, Repp, Saturn, SC-05D Galaxy Note LTE, SCH-I405U Stratosphere 4G, SCH-I815 Galaxy Tab 7.7, SCH-I889 Galaxy Note, SCH-I899, SCH-M510, SCH-R910 Galaxy Indulge, SCH-R940 4G LTE, SCH-W899, SGH-I717 Galaxy Note LTE, SGH-I757 Galaxy S II Skyrocket HD LTE, SGH-I847 Rugby Smart, SGH-I957 Galaxy Tab 8.9 4G LTE, SGH-T679 Exhibit II 4G, SGH-T769 Galaxy S Blaze 4G, SGH-T869 Galaxy Tab 7.0 Plus 4G, SGH-T959D Galaxy S Fascinate 3G+, SGH-T959V Galaxy S 4G, SGH-T989 Galaxy SII, Showcase, SHV-E140S Galaxy Tab 8.9 LTE M32, SHV-E150S Galaxy Tab 7.7 LTE, SHW-M100S Galaxy A, SHW-M110S Galaxy S, SPH-L700 Galaxy Nexus 4G LTE, Stratosphere Galaxy S, Transfix, Transform Ultra, Transform, Vibrant, YP-G1CW Galaxy S WiFi 4.0, YP-G1EW Galaxy S WiFi 4.0, YP-G70CW Galaxy S WiFi 5.0, YP-G70EW Galaxy S WiFi 5.0, YP-GB1EW Galaxy Player 16GB, YP-GB70EW Galaxy Player 70 16GB, YP-GB70NW Galaxy Player 70 32GB, YP-GP50 Galaxy Player 50, YP-MB2 Yepp
- Saygus: Vphone V1
- SciPhone: N19, N21
- Sharp: Aquos 007SH The Hybrid, Aquos 101SH The Hybrid, Aquos 102SH, Aquos 103SH, Aquos 104SH, AQUOS PHONE f SH-13C, AQUOS PHONE IS11SH, AQUOS PHONE IS12SH, AQUOS PHONE IS13SH, AQUOS PHONE IS14SH, AQUOS PHONE SH-01D, AQUOS PHONE SoftBank 006SH, AQUOS PHONE THE HYBRID SoftBank 007SH J, Aquos SH-12C, Aquos, DM011SH, FX PLUS ADS1, Galapagos 10.8 Media Tablet, Galapagos 5.5 Media Tablet, GALAPAGOS SoftBank 005SH, IS01, IS03, IS05, LYNX SH-10B, SH7218U, SH7228U, SOFTBANK 007SH KT
- SK Telesys: SK-S100
- SMiT: MID-560
- SoftBank: 001HT Desire HD, 003Z
- Softbank: Galapagos
- Sony Ericsson: A86, A8i, Live with Walkman, SO-01B, SO-01C Sakura Pink, SO-01C, U8180, VM701 Optimus Slider, W8 Walkman E16a, WT18i, WT19a Walkman, Xperia Active, Xperia Arc HD, Xperia arc S, Xperia arc, Xperia mini pro, Xperia mini, Xperia Neo V MT11a, Xperia neo, Xperia play SO-01D, Xperia play, Xperia ray ST18a, Xperia X10 mini pro, Xperia X10 mini, Xperia X10a, Xperia X10i, Xperia X8

- Sony: Aoba, S1, S2, Walkman NW-Z1060, Walkman NW-Z1070, Xperia acro HD IS12S, Xperia acro HD SO-03D, Xperia New eDream6 LT28i, Xperia NX SO-02D, Xperia P LT22i, Xperia ray ST18i, Xperia sola MT27i, Xperia U ST25a, Xperia U ST25i
- Spice: Mi-270, Mi-300, Mi-310, Mi-410
- Sprint: Express, Intercept, Moment
- Star: W7272+ 3G
- TechFaithWireless: Lancer Google, Lancer
- Tiger: G3
- T-Mobile: Comet U8150-B, G1, G2, Move, myTouch 3G, Prism U8651, Pulse, S7-303u SpringBoard 4G, Vivacity
- Toshiba: AC-100-10U, AT200, Dynabook AZ, Excite 10 T AT300, Excite 10.1 AT305, FOLIO 100, Regza IS04, Regza T-01C, THRIVE 7, Thrive
- Viewsonic: gTablet
- ViewSonic: V350, V430, ViewPad 10e, ViewPad 10s 3G, ViewPad 10s, ViewPad 4, ViewPad 7e, ViewPad 7x 3G, ViewPad e70, ViewPhone 3e, ViewPhone 4e, ViewPhone 4s
- Viliv: P3 Prime, X10 HSPA, X7 HSPA
- Vizio: Via Tablet VTAB1008
- Vodafone: 845, 945, VF845 Joy
- WayteQ: X-Phone Android
- WellcoM: A66, A68, A69, A88 3G, WePAD A800
- Xiao Mi: C2000
- Yarvik: GoTab Velocity TAB264, GoTab Xerios TAB461EUK, GoTab Zetta TAB468EUK
- Ziss: Cube MID, Jet Tablet, Jet Touch Tablet, Pub, Soho 3
- ZTE: Aglaia, Amigo, Avail, Blade II, Blade S, Blade, Crescent, FTV phone, Libra, Ligh Tab V9C, Light Plus, Light Pro, Light Tab V9A, Light Tab V9S, Light, Link, Lutea, Mercury, Micromax A60, Mimosa X, N910, PF100, PF112, PF200 EU, PF200, R750, Racer II, Racer, Score X500 M, Score X500, Score, Skate Acqua, Skate Kis, Skate, Smooth, STAR 7 009Z, Style Q, T72, T98, Tureis, U900, V821, V852 Dreamer, V871, V881, V9, V9+, Warp, X501, ZTE Fury N850

## 12 – Chinese phones based on MTK chipset:

- Alcatel Virgin: VM202, VM363, VM621i, VM800
- Alcatel: One Touch OT-090, One Touch OT-103, One Touch OT-104, One Touch OT-106, One Touch OT-108, One Touch OT-109, One Touch OT-112, One Touch OT-113, One Touch OT-140, One Touch OT-150, One Touch OT-203, One Touch OT-203E, One Touch OT-204, One Touch OT-205, One Touch OT-206, One Touch OT-208, One Touch OT-209, One Touch OT-213, One Touch OT-214, One Touch OT-216, One Touch OT-222, One Touch OT-223, One Touch OT-250, One Touch OT-252, One Touch OT-255, One Touch OT-255D, One Touch OT-280, One Touch OT-300, One Touch OT-301, One Touch OT-303, One Touch OT-304, One Touch OT-305, One Touch OT-306, One Touch OT-311, One Touch OT-315, One Touch OT-315M, One Touch OT-355, One Touch OT-355D, One Touch OT-356, One Touch OT-360, One Touch OT-361, One Touch OT-362, One Touch OT-363, One Touch OT-380, One Touch OT-383, One Touch OT-385, One Touch OT-385J, One Touch OT-455, One Touch OT-505, One Touch OT-505K, One Touch OT-506, One Touch OT-506D, One Touch OT-508, One Touch OT-540, One Touch OT-543, One Touch OT-565, One Touch OT-565K, One Touch OT-585, One Touch OT-585D, One Touch OT-602, One Touch OT-602D, One Touch OT-606, One Touch OT-633, One Touch OT-660, One Touch OT-665, One Touch OT-706, One Touch OT-708, One Touch OT-710, One Touch OT-710D, One Touch OT-710K, One Touch OT-7110, One Touch OT-799, One Touch OT-800, One Touch OT-802, One Touch OT-802Y, One Touch OT-803, One Touch OT-803D, One Touch OT-806, One Touch OT-806D, One Touch OT-807, One Touch OT-807D, One Touch OT-808, One Touch OT-808M, One Touch OT-809, One Touch OT-813, One Touch OT-813D, One Touch OT-818, One Touch OT-818D, One Touch OT-819, One Touch OT-819D, One Touch OT-828, One Touch OT-880, One Touch OT-888, One Touch OT-888D, One Touch OT-900, One Touch OT-901, One Touch OT-905, One Touch OT-907, One Touch OT-AM01, One Touch OT-B331, One Touch OT-C700, One Touch OT-C701, One Touch OT-C707, One Touch OT-C717, One Touch OT-C819D, One Touch OT-EL05, One Touch OT-F0Z9, One Touch OT-F115, One Touch OT-F121, One Touch OT-F122, One Touch OT-F152, One Touch OT-F330, One Touch OT-F331, One Touch OT-F344, One Touch OT-I606, One Touch OT-I650, One Touch OT-I780, One Touch OT-I802, One Touch OT-I808, One Touch OT-I818, One Touch OT-I880, One Touch OT-I888, One Touch OT-I898, One Touch OT-I905, One Touch OT-KR01, One Touch OT-M298, One Touch OT-MD01, One Touch OT-MD02, One Touch OT-MS01, One Touch OT-MS02, One Touch OT-Q3, One Touch OT-



S122, One Touch OT-S215, One Touch OT-S218, One Touch OT-S319, One Touch OT-S320, One Touch OT-S321, One Touch OT-S520, One Touch OT-S521, One Touch OT-S621, One Touch OT-S626, One Touch OT-T208, One Touch OT-T218, One Touch OT-T255, One Touch OT-T355, One Touch OT-V345, One Touch OT-V350, One Touch OT-V354, One Touch OT-V355, One Touch OT-V555, One Touch OT-V570, One Touch OT-V607, One Touch OT-V670, One Touch OT-V770

- Alfatell: C200, c500, H1, H1A, H2, H3, H300, H4, H5, H5A, H9
- Anycall: Cect-168, D900, F488E, i660, i908+, L708, S628
- Anycoll: A508, i908e, L588, QS850
- Anycoll: D66, D66+, D66++, E307, E553, E556, E802, E880, E880C, E880L, E883, E888, F818, T808, T818
- Avvio: 209, 409, 505, 530A, 930A, A1000, GD852p
- Azumi: Bird D515, D615, D706, F1, F501, F518, K102, K298, M3, Q503, S101, S230, S302, S305, S306, S710, V708, V750, V788, V789
- Beyond: B333, B38, B505, B530, B818, B83, BY125, C3
- BlackCherry: BL1000, bl2000, BL7000B, BL8000
- Cect: 003, 1088, 199, 5800D, 599, 605, 6300L, 808, 888, A008, A100, A1818, A519, A6668, A706, C2000D, C3000, C3600s, C5188, C600, C800, C828, C8600, C92+, E900, F1200, F22, i658, IP200, K2, K369, k770, K808, K808+, K828, K838, LV918, M619, M8, M8600, N6298, N73, N788, N81+, N82, P168, P3711, P3711i, P8400, Q380, Q500, Q500BT, Q558, Q618, Q638, Q8, Q86, S588, S613, S800, S90, S901, T1, T118, T520, t590, T601, T689, T808, T918, T999, U880, U8810, U90, V180, V200, V329, V400, V6688, V668B, V70, V768, V777, V90, V909, V98, Y200, Y809
- ChatPhone: SN50
- Cinte: 4G+++, 9000C, 911, V902, 9650 WIFI, a008, A1 watch phone, A3 Mini TV mobile phone, A750, A808 watch phone, A810watch phone, A820 watch phone, A9530 N9 Mini TV, Aoke08 watch phone, Aoke09 watch phone, C1000, c5, c5000, c6, Compass 4GS, E73, EG110 watch phone, EG120 watch phone, eg200, F003, F006, F3 watch phone, FM5000, G555 watch phone, G700, GD910, H003+, H003TV, H1, H109 TV, H4000, H802D, H9, H9590, i4GS+, i66, I68 4G, i9, J2000, J8, JC E9, JC37, JC9700+, K1 watch phone, KA09, Ki4, M002L, M810 watch phone, M860, MQ006, MQ008, MW08, N200+, N388, N800, NO.4, P168i 3GS, Q7, Q8, qmini cck10, T5000, T6000, T8100, V8, W009+, W08, W09, W600, W688, W88, W968, WG3, X7+
- Daxian: 529, 619, 669, 780, 8100, C800, C8100, E689, J168, J6, JT398, K888, KT1, N55, N800, P168, T108, X3000, X728, X9188, X960, X999
- Diadem: MK901, ML718, ML722, ML780, ML825, MO650, MT808, MT809, MT810
- Eriwin: ZX-A1, ZX-A8500, ZX-AM01, ZX-C6000, ZX-C700, ZX-E33, ZX-ET-2, ZX-F116, ZX-F52, ZX-F605, ZX-F668, ZX-FX3, ZX-FX8, ZX-i6 pro, ZX-L900, ZX-N700, ZX-Q10, ZX-Q1000, ZX-Q88, ZX-Q89, ZX-QY003, ZX-T001, ZX-T8100, ZX-W1, ZX-W102, ZX-W105, ZX-Y005, ZX-Y008, ZX-Y009, ZX-Y010
- ETouch: 232Pro, 303Pro, 515Pro, 616Pro, 636Pro, CG1, D108, D11, D12, D120, D160, D18, D200, D21, D220, D23, D30, D300, D33, D35, D38, D6, D60, DS100, F50, J100, J165, J168, MD82, X88i, XL10, XL25, XL53
- Fly: 2040i, 2040L, 2080, B600, DS100, DS105, DS110, DS110i, DS150, DS155, DS156, DS160, DS165, DS170, DS180, DS185, DS210, DS400, E130, E135, E140, E145, E147TV, E160, E170, E171, E175, E181, E185, E190, Ezzy, G1, Hi-SLDR, M130, M140, MC105, MC120, MC130, MC150DS, MC160, MC165, MC170DS, MC175, MC180, MC220, MC300, MP500, MP600, MX230, MX300, Q110, Q200, Q300, Q400, Q410, Q420, SL110, SL130, SL140DS, SL140i, SL399E, SL500i, SX200, SX205, SX230, SX300, SX305, SX315, V100, V180DS, X60
- Flying: F007, F035, F69, F800, F900, F916, F936, F996
- Fly-Ying: E71, E71i, F003, F006, F007, F008, F021, F026, F030, F036, F080, F200, F636, F698, F99
- Forme: 6303, D386, D5, E71, F8, F8+, F808, F9, L300, M6, M800, N26, N78, N82, U969
- Foston: 968B, FS-829, FS-836B, FS-862, FS-868B, FS-889, FS-968, FS-968A, FS-968B
- FUCHEN: FCB083, FCB092, FCD11, FCV11 DVB-T, i5000 MT6253 GPRS TV JAVA, i5000, MT6253, PDA8915
- Fujjistar: FJ-71
- G-Five: 3120, 3510, 6620, 736, 7610, 7630, 800, C2160, C6233, D11, D60, D68, D70, D90, D902, D99, E71y, e82i, F2, F3, F7, F8, G3000, G365, G370, GF18, GF73, H600, H91, i300, i310, L300, L700, M1, M33, M5130, M6, M7, M73, M77, M99, N79, N79i, N90, Q33, S9, T320i, T33, T33+, T580, U303, U505, U717, U800, U808, U828, U855, U879, U899, U909, U939, U969, X9
- Hengda: 8520, 9600, c9000, mini 9800, q10, Q5, Q8
- HTC fake: 6262, A288, G1-TV90, Hero-G3, S900
- Huawei: G20, G3500, G3501, G3510, G3510m, G3510s, G3610, G5010, G5500, G5730, G5760, G5760s, G6, G6005, G6150, G6150a, G6300, G6600, G6603, G6608, G660D, G6610, G6610v, G6620, G7002, G7007, G7010, G7050, G7105, G7206, G7210, G7300, G7600, T330, T710, T711

- Intex: IN1212, IN1224, IN2010, IN2020E, IN2020QT, IN2022, IN2030, IN2030D, IN2030DX, IN2040E, IN2040N, IN2044, IN2080, IN2080E, IN2222, IN2233, IN2244, IN2266, IN3030, IN3055, IN3060, IN3070, IN3080, IN3333, IN4040, IN4060, IN4415, IN4420, IN4420S, IN4455, IN4460, IN4466, IN4477, IN4488, IN4495, IN5030, IN5040, IN5050, IN5544, IN5555, IN6611, IN6633, iSmart
- JinPeng: 007FM, 488, 5108, 5199, 5588, 768, 8283, A1280, A2198, A5120, A5616, A5658, A5688, A666, a799, A928, C3000, E55, E6180, E88, F8, H788, i908, JP1688, K330, K730, K989, L808, M8, M868, M99, S109, S1318, S1888, S2128, S868, V70, V70FM, W169, W880
- Kyocera: C2500, E2500, E3500, S1600
- Lenovo: BA22, CA12, F10, Z-MK189
- Mediatek: G104 watch phone, One Touch OT-105, One Touch OT-600, v700, W818, ZX-QY001, ZX-Y007
- Micromax: GC255, M2, Q1, Q1+, Q2, Q3, Q5, Q50, Q55, Q6, Q7, Q75, Q80, X112, X113, X114, X115, X116, X117, X118, X122, X1i, X1i+, X1u, X200, X211, X212, X215, X220, X225, X226, X228, X230, X235, X250, X260, X262, X263, X265, X266, X280, X285, X2i, X2i+, X310, X330, X332, X360, X361, X370, X395, X414, X450, X485, X50, X505, X510, X555, X560, X600
- Motorola: EX108, EX109, EX112, EX115, EX118, EX119, EX122, EX126, EX128, EX211, EX212, EX223, EX245, EX292, WX160, WX161, WX180, WX181, WX260, WX265, WX280, WX288, WX290, WX295, WX306, WX345, WX390, WX395
- MyPhone: 1070, 3350, 3370, 6650, 6651, 6670, 6691, B21, B21c, B22, B23, B50, B50c, B71, Q19, Q21, Q22, Q88, QT7, S21, T12, T13, T22, T23, T52
- Narnia: 8088, i70, V6
- Nasaki: B9, G5, NK630
- Nckia: 5610, 5700, 5700+, 6300c, C5, E71, M9, N10+, N99i, XpressMusic
- Neccom: n880+
- Neoi: 809
- Newrone: i8
- Newton: NTi8, Q6
- Nexcel: E71
- Nexcom: NC328
- Nexian: NX-G381i, NX-G503, NX-G505, NX-G522, NX-G700, NX-G788, NX-G801, NX-G868, NX-G900, NX-G901, NX-G911, NX-G922, NX-G923, NX-T780, NX-T900, NX-T911
- NJStar: L1100
- Nkiac: F168
- Nktel: 2800, 300, 5310, A100, A200, A300, A500, A600, A700, A8800, A8800+, C2000, C2008, C5000, C6000, C7000, C8000, C8600, C9000, E71, K100, K200, K300, K400, K770, K99, S350, U800
- Nokig: N97
- Nokla: 6500s, 9000+, C7i, D328, E90, N72, N77, N95, N958, N96, N97
- Nony: E71, E71+, S208, S212, S311, S332
- Nova: N800
- Novo: ST200
- Pantech: C180, C320, P1010
- Philips: 199, 292, 298, 390, E100, E210, F322, F511, K700, M200, X100, X116, X216, X223, X312, X325, X501, X503, X518, X519, X703, X710, X806, X860
- PowerPack: TC-2GSM\_E553, TCG-8801, TCG-8888, TCGS-218, TCGS-8806, TCGS-8818, TCTV-158, TCTV-178, TCTV-228, TCTV-278, TCTV-438
- Qmobile: E125, E150, E195, E200, E400, E500, E900, F22, F220, F23, F252, F55, F680, M2, M22, ME114, Q11, Q126, Q18, Q180, Q20, Q21, Q212, Q213, Q218, Q24, Q25, Q25i, Q26, Q266, Q26i, Q27, Q28, Q28i, Q29, Q33, Q37, Q38, Q3i, Q4, Q510, Q5310, Q55, Q61, Q63, Q66, Q73, Q8, Q88, Q99, T550, T630
- Samkung: TV16
- Samking: V11
- Samsung: E318
- Samsonic: U800+
- ScellPhone: e688, i68, i68+, i68++, i69, i9+++, i99++, L88, Q11, s18, tv1000

- Sigmatel: 3600i, 5130, 6700, 7700, 9300, FXS S83, Ginwave25, H1, Hxd3600, N9, S18, S18i, S22, S3, S30, S3plus, S4, S400, S47, S66, S77, S80, S80i, S81, S86, S88 s90 s98, S9, S90, S9000, S90i, S91, S96, T2, T300, t33+, T33i, T55, T66, T85, T99, T99i, TV60, V88, W999
- Spice: D80, D88, D88N, D90, M3636, M4242, M4250, M4580, M4580n, M5050, M5055, M5151, M5161, M5252, M5454, M6000, M6060, M6262, M6363, M940, QT44, QT50, QT52, QT55, QT58, S300, S5110, S5330, S570, S580, S590, S650, S7, S700, S7000, S705, S707, S707N, S710, S808, S820
- Suny-ericsson: W558
- T-Mobile: Energy
- Toshiba: Q300, V118, V9+, V9++
- TV-Mobile: 2sim, 8800, A2688, A968, Ak09, C902, E71, G10, K900+, N99i, S2, STD25, U26, V6, WiFi-C5000
- Tvmobile: C702, E71pro, Q1, T2010, X10
- Ufone: G3510
- UTStartcom: CFM114CP, CL1135, CLP138, CLX100PR, GLPF1114MX, GLPL148SV, GPF1134CA, GPF198, GPFE1238, GPFE128en, GPT2085, GPT380EN, GTX212, TE1201sv, TTX28MX
- Vodafone: 135, 150, 235, 250, 252, 331, 340, 345, 351, 455, 541, 543, 547, 555
- Zhongzheng: G300
- ZOHO: G500, W301, W302, W302D
- Zonda: 1075, 1085, 1090, 1095, 1095R, 1098, 1099, TF350, TF425, ZMCK865, ZMCK870, ZMEM1120, ZMKN110, ZMTFTTV20, ZMTN600, ZMTN610, ZMTN615, ZMTN815, ZMTN905, ZMUR300